



SOFT STONE

Name:	Soft stone panel
Material:	Colored sand + Calcium powder + Chemical additives
Size:	1200*600 mm, 3000*1200 mm
Advantages:	Waterproof, fireproof, flexible
Surface:	Travertine, mosaic, rammed earth slab,slate...
Used space:	Outdoor wall decor,
MOQ:	200 sqm per design
Install:	Cement, joint sealant...



FS-001



FS-002



FS-003



FS-004



FS-005



FS-006



FS-007



FS-008



FS-009



FS-010



FS-011




FS-012





FS-013

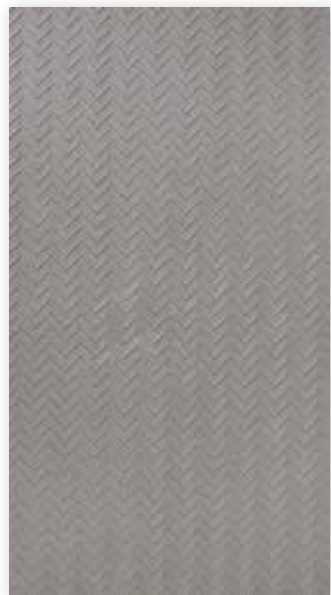

FS-014



FS-015



FS-016



SF-025



SF-026



SF-027



SF-028



FS-017



FS-018



FS-019



FS-020



SF-029



SF-030



SF-031



SF-032



SF-021



SF-022



SF-023



SF-024



SF-033



SF-034



SF-035



SF-036

Normal Color Option



Pure White



Off White



Off Yellow



White Jade



Silver White




Silkworm Cocoon



Cement Ash



Light Ash

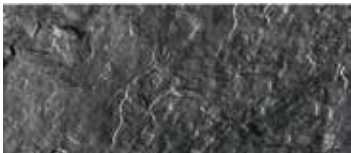


Dark Gray



Brick Red



Date Red

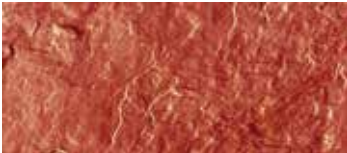

Bright Red




Bright Moon Yellow



Brass



Earthy Yellow

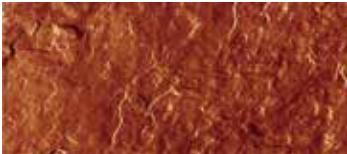

Orange Red



Orange Yellow



Pure Black

Printing Color Option



DS6A1001



DS6A1004



DS6A1002



DS6A1003



DS6A1005



DS6A1007



DS6A1006



DS6A1010



DS6A1008



DS6A1011



DS6A1009



DS6A1013

Soft Stone Installation



1. Use a line to position



2. Scrape off the cement slurry on the wall



3. Scrape off the cement slurry on the back of the product



4. Move up and down to adjust the width of the space, and use a large board to compact the product to the wall



5. Use a plastic bag to fill the gap with grout or fill the gap with neutral silicone glue



6. When the grout is half dry, use a steel bar to pull the seam



7. Use a hook to scrape off the areas contaminated by adhesive and cement slurry



8. Use a dry sponge to remove dust

External Corner , Internal Corner, Window sill pasting requirements



Corner



Begonia corner



45° diagonal



Corner

